
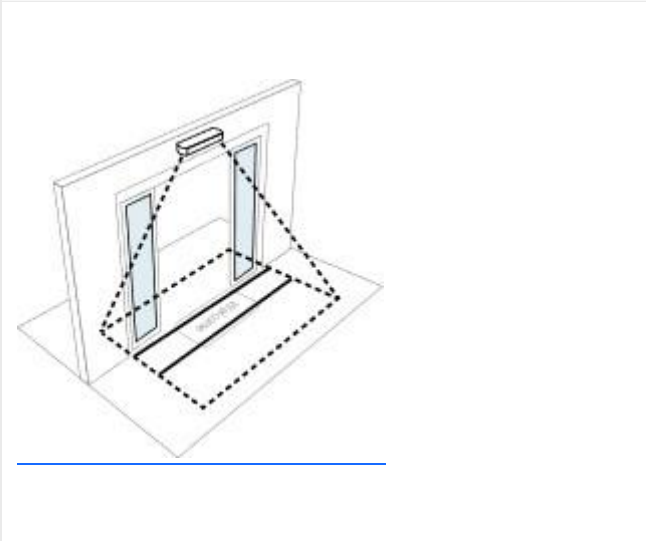
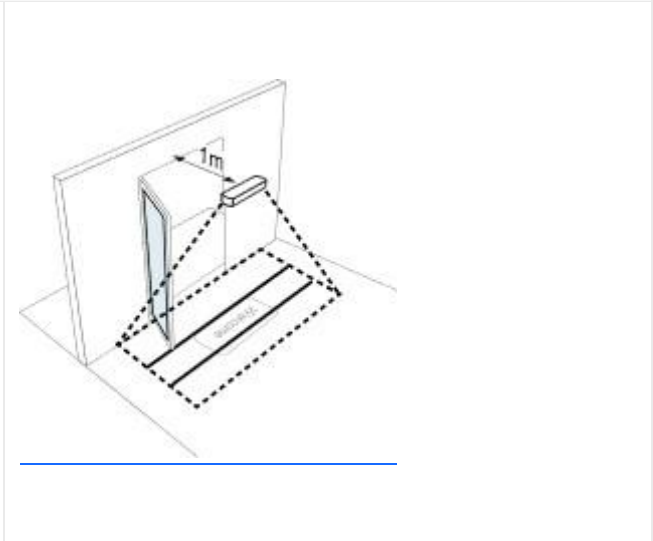
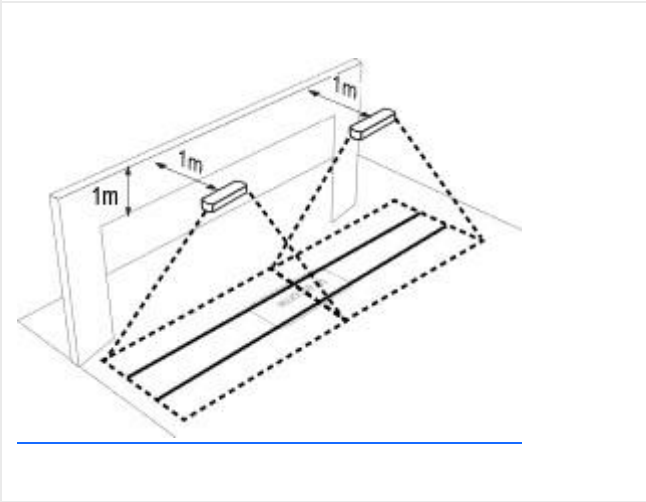
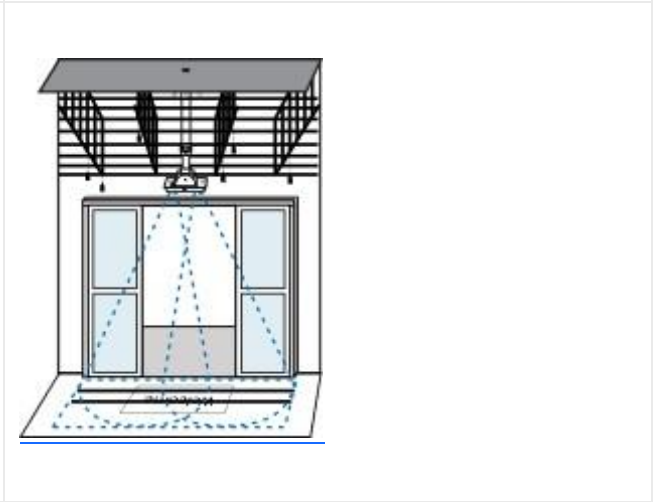


Ideal position for each entrance type

Type of Entrance	
	
Sliding Door The counter requires to be installed in the middle of the entrance perpendicularly down towards the floor. The counting line must align with the entrance and parallel to the door.	Swinging Door The counter requires installation to be at least 0.5 - 1 metre away from the door. The counting line must clearly define the swinging path and make sure the door does not overlap the counting zone.
	


Wide Entrance

Wide entrance requires multiple counters based on different ceiling height and entrance width.

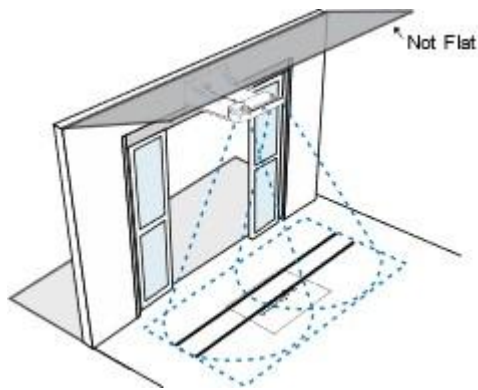

Open Ceiling Environment

Use a drop pole to overcome the obstacles that are obstructing the live view of the counter.

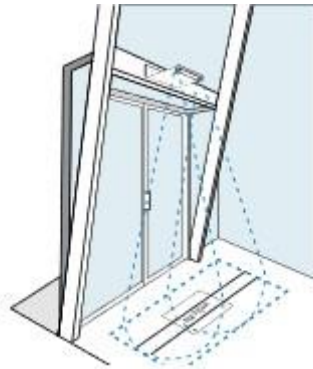

Slanted Ceiling

Use a wall bracket

along the side of the wall to ensure that the counter will be installed along an even surface.

Glass Entrance

Use a wall bracket on the along the side of the wall to ensure that the counter will be installed along an even surface.